

# Score Clock Cheat Sheet

## Clearing the Previous Game Data





1. Press the button



2. If the correct rink name is displayed press

## Set the Game Time



1. Press  and then  then enter the prompted MM.SS.s (ie for a 15 minute period) enter it by pressing [1][5][0][0][0]



2. The press

## Entering the Period




1. Press
2. Press the number corresponding to the Period.

Period: # ◀


## Entering Penalties

The clock must be stopped to enter a penalty.

1. Press  or  Or for a major  or 

2. The control will display 

3. Enter the player number

4. The control will display 



- Press to accept the default penalty time (to set default penalty time see Hockey Options) OR if you want to enter a different penalty time or if you do not have a default penalty time press the number keys to enter penalty time.

### Clearing Penalties

- Press or until the desired penalty is displayed
- Press

### Setting the Score

- Press or
- The control will display or   
**Important** to note to press the [1] button to add one goal to the score
- Enter any value 0-9 and it will add that value to the value with the “+”.
  - To add more start from step 1

### **Correction Score Mistake**

- Press then or
- The control will display or

### Intermission Timer or Time Out



Press TIME OUT TIMER the MPCW-7 will display  
The last time out timer used will display as an option to use this  
timer press YES.

Time Out: (1-5)



Use the number keys 1-5 to choose the time out.

- The time out number selected will automatically begin counting
- The horn will sound for two seconds at the warning time
- The horn will sound for four seconds at the end of the time out.

Time2: 02:00.0